








Dimplex

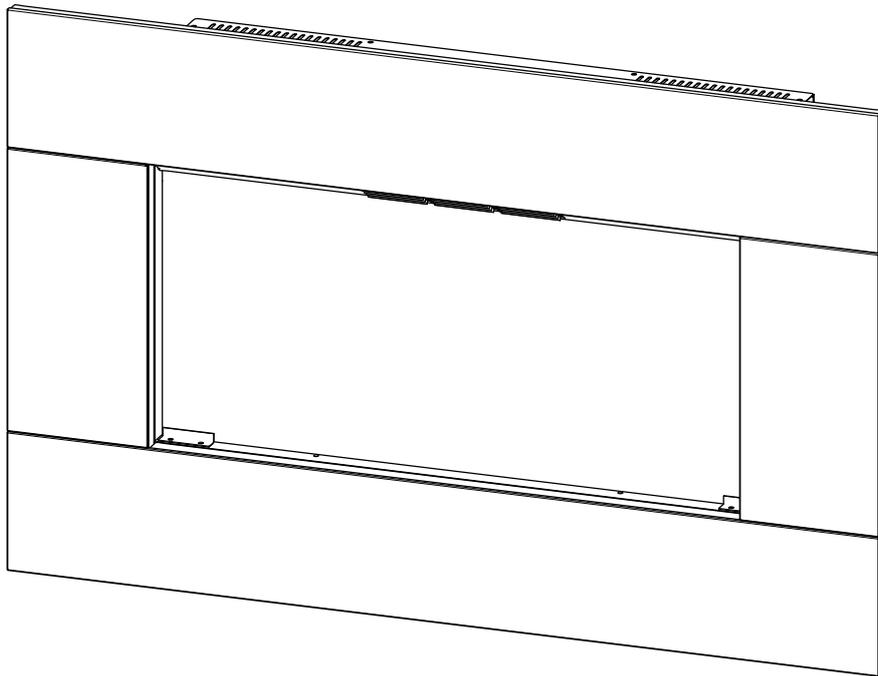

DIAMANTIQUE Mirrored Wall Fire

UK

08/ 53178/2 Issue 2

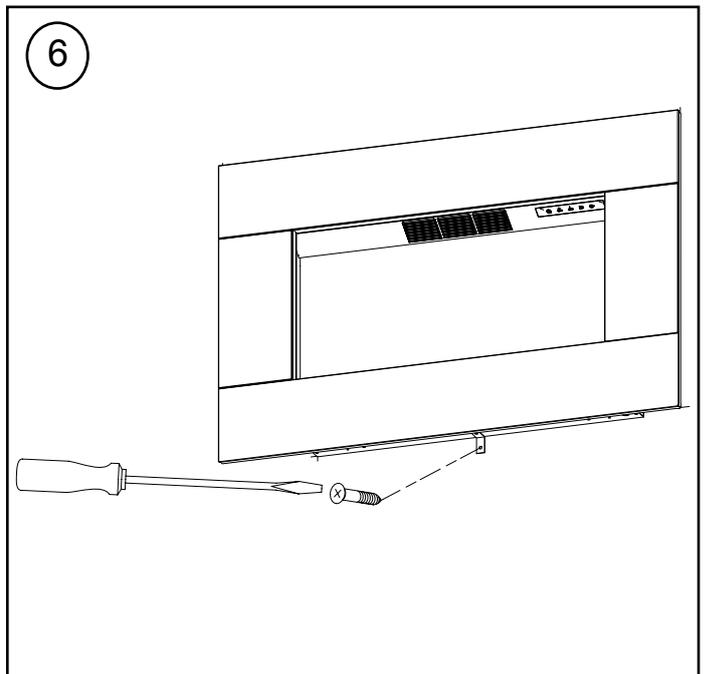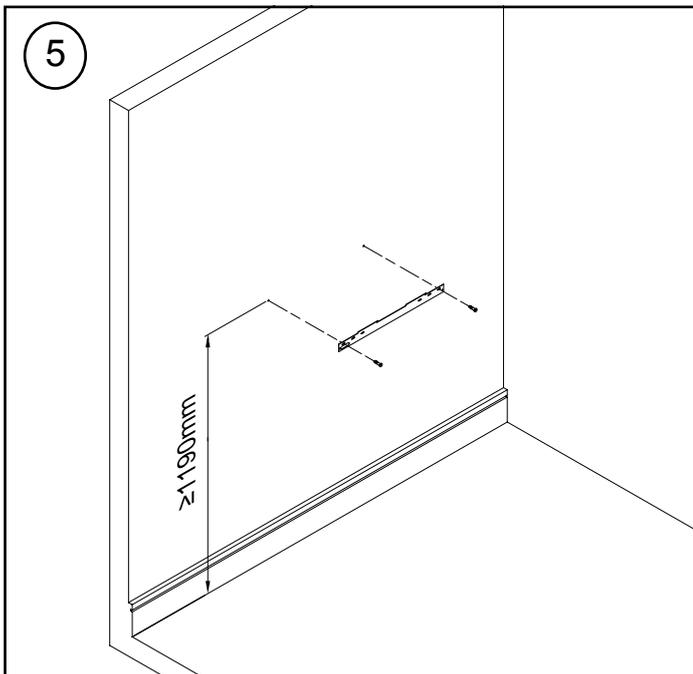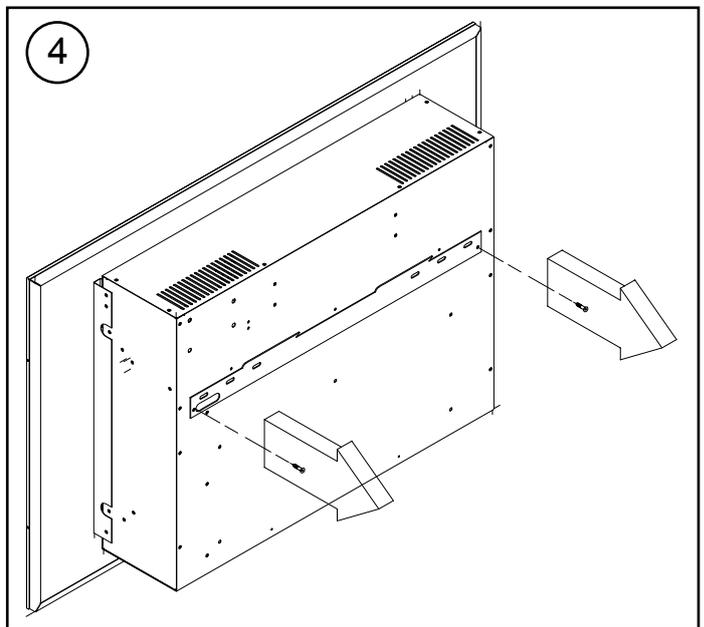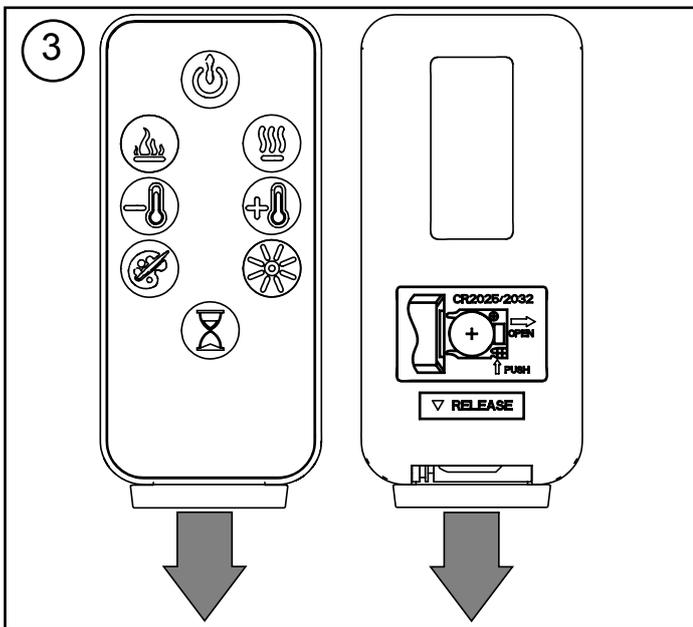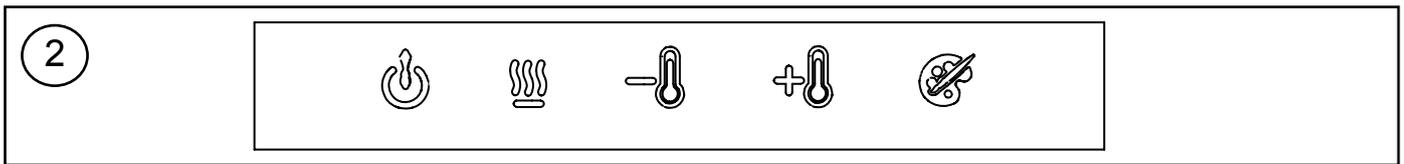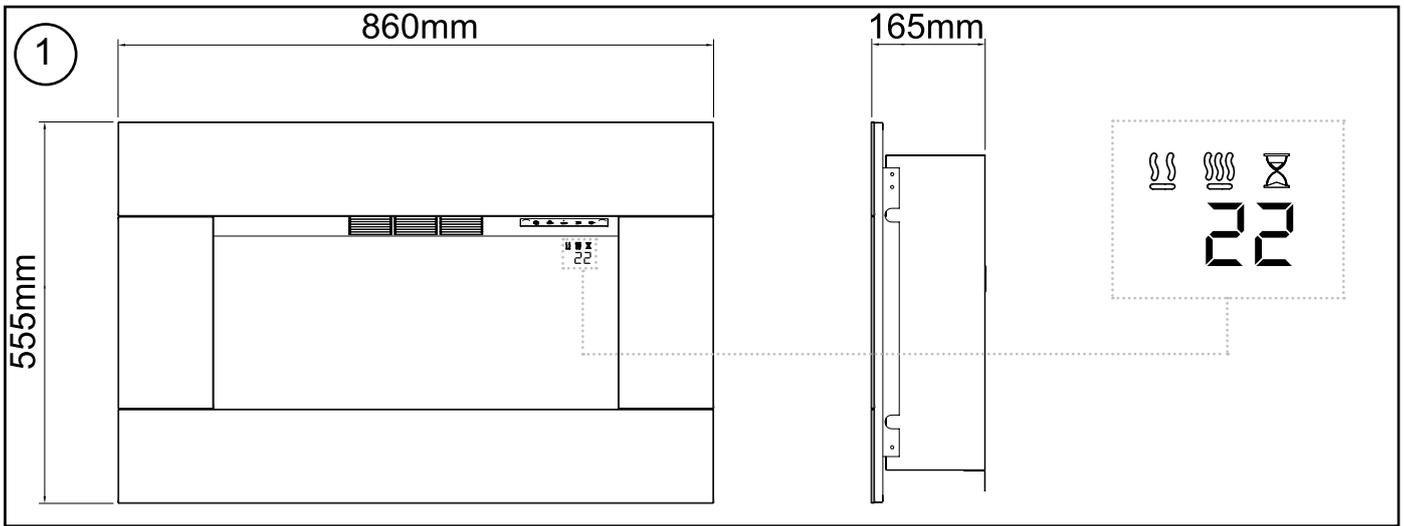

Diamantique

IMPORTANT: THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE

Important Safety Advice

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

If the appliance is damaged, check with the supplier before installation and operation.

Do not use outdoors.

Do not use in the immediate surroundings of a bath, shower or swimming pool.

Do not locate the appliance immediately below a fixed socket outlet or connection box.

The appliance carries the Warning symbol  DO NOT COVER, indicating that it must

not be covered.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by Children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understanding the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

Do not use this appliance in series with a thermal control, a program controller, a timer or any other device that switches on the heat automatically, since a fire risk exists when the appliance is accidentally covered or displaced.

Ensure that furniture, curtains or other combustible material are positioned no closer than 1 metre from the appliance.

In the event of a fault unplug the appliance.

Unplug the appliance when not required for long periods.

Although this appliance complies with safety standards, we do not recommend its use on deep pile carpets or on long hair type of rugs.

The appliance must be positioned so that the plug is accessible.

If the supply cord is damaged it must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard.

Keep the supply cord away from the front of the appliance.

Warning: In order to avoid overheating, do not cover the appliance. Do not place material or garments on the appliance, or obstruct the air circulation around the appliance, for instance by curtains or furniture, as this could cause overheating and a fire risk.

Warning: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out,

this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

This instruction can be found at:

www.dimplex.co.uk

General

Unpack the heater carefully and retain the packaging for possible future use, in the event of moving or returning the fire to your supplier. The fire incorporates a flame effect, which can be used with or without heating, so that the comforting effect may be enjoyed at any time of the year. Using the flame effect on its own only requires little electricity.

Before connecting the heater check that the supply voltage is the same as that stated on the heater.

Please note: Used in an environment where background noise is very low, it may be possible to hear a sound which is related to the operation of the flame effect. This is normal and should not be a cause for concern.

Electrical connection

WARNING – THIS APPLIANCE MUST BE EARTHED

This heater must be used on an AC ~ supply only and the voltage marked on the heater must correspond to the supply voltage. Before switching on, please read the safety warnings and operating instructions.

Fitting Product - see Fig. 4, 5 & 6

WARNING: DO NOT ALLOW CHILDREN TO CLIMB OR HANG FROM THE PRODUCT, AS A FALLING APPLIANCE CAN CAUSE INJURY OR DEATH. THIS APPLIANCE MUST BE INSTALLED A MINIMUM OF 850MM FROM THE FLOOR, THIS IS TO KEEP THE FUEL BED PIECES OUT OF THE REACH OF YOUNG CHILDREN TO WHOM THEY MAY POSE A CHOKING HAZARD.

NOTE: Wall fixings provided are for a block wall only, fitting to a wall or partition of a different construction will require special fixings that are not provided with this product. The installation of the product requires a reasonable level of DIY skills. Please read this guide thoroughly before commencing the installation and if in doubt, seek help from a competent person.

Please follow the steps below.

1. Remove the wall hanging bracket from the product as shown in Fig. 4.
2. Take the wall hanging bracket and place it against the wall in the location where you wish to fit the product and mark the wall with a pencil through the holes of the bracket.
3. Remove the bracket and drill two holes where you marked in 'Step 2' (the fittings provided require holes to be 6mm in diameter and 35mm deep)
4. Inset the wall plugs ensuring they are flush with the surface of the wall, then hold the wall bracket over the holes and fix in place with the screws provided, as shown in Fig. 5.
5. Hang the product onto the bracket.
6. Look under the product and see the 'L-Bracket' shown in Fig. 6. Mark the wall through the hole in the 'L-Bracket' and remove the product.
7. Drill the hole marked out in 'Step 6' and insert a wall plug, then rehang the product on to the wall hanging bracket. (the fittings provided require holes to be 6mm in diameter and 35mm deep)
8. Secure the product by fixing the 'L-Bracket' to the wall with the screw provided. as shown in Fig. 5. Drilling the holes for the bracket at 1190mm above floor level will leave the body of the product 850mm above floor level. This can be increased if desired.
9. Check to product to ensure it is secure.
10. Open the 'Fuel Bed' media and place on the fuel bed of the product.

Controls - see Fig. 2 & 3

The five controls shown below are found on both the product and the remote control:



On/Standby Button.



Heat Cycle Button- Cycles the unit sequentially through the 3 settings: Low Heat, High Heat and Off. The heat setting will be indicated by an icon in the floating display see Fig.1.

This icon in the floating display indicates Low Heat has been selected.

This icon in the floating display indicates High Heat has been selected.

When the flame effect is on the floating display will turn off after 5 seconds, however if the heater is being used independently of the flame effect the low heat or high heat icon will appear continuously in the floating display.



Thermostat Control Buttons- Adjust the temperature set point to your individual requirements. Once the desired set temperature is reached the heater will cycle on and off to maintain the desired set temperature. The default temperature is 22°C, the range of temperature is between 5-32°C. The set temperature can be seen for 5 seconds after selection in the floating display shown in Fig.1.

NOTE: Holding the (-) button on the unit and then pressing (+) on the unit will change the temperature from °C to °F, or vice versa.



Theme Change Button- each time you press this button you will scroll through the available theme options. There are 7 standard themes 1-7 each of which have a High and Low level which you can switch between using the brightness button on the remote control. Theme 8 is a 'Theme Cycle Mode' which will scroll through the full range of colours. The 'Theme' number selected can be seen for 5 seconds after it is selected in the floating display as shown in Fig. 1.

Remote Control - see Fig. 3

In addition to the previously mentioned controls, the remote control also has the following three controls:



Brightness Button- Changes the brightness of the fuel bed media between 'H' (High) or 'L' (Low). Also note that pressing the Brightness button while in Theme 8 'Theme Cycle Mode' will freeze the cycle 'F' will indicate the cycle is frozen and 'U' will indicate it is Unfrozen. The 'H, L, F & U' can be seen for 5 seconds after they are selected in the floating display as shown in Fig. 1.



Flame On/Off Button- This cycles the flame effect 'On' or 'Off'. Please note the heater can be used independently of the flame effect.



Sleep Timer Button- to set the product to automatically shut off after a pre-set amount of time (from 30minutes to 8 hours) Pressing the timer button will increase the length of time until the product shuts off by increments of 30minutes. The 'Sleep Timer' icon and timer can be seen for 5 seconds after selection in the floating display as shown in Fig 1. NOTE: The Sleep Timer can be cancelled by repeatedly pressing the 'Sleep Timer Button' until the timer displays nothing.

The maximum range of use for the remote control is approximately 7 metres. Warning: It takes time for the receiver to respond to the transmitter. Do not press the buttons more than once within two seconds for correct operation.

Dimplex

Millbrook House
GrangeDrive
HedgeEnd
Southampton

[c] GDC Group Ltd,

All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Dimplex.

A division of GDC Group Ltd,

Remote Control - continued

1. To activate the remote control remove the battery isolation strip, which is used to ensure your remote control reaches you fully charged. See Fig. 3
2. To replace the remote control battery, turn over the remote control, and follow the diagram embossed on the remote control.
3. Only use CR2025 or CR2032 size of batteries.

Disable Heat

If desired the heater on the unit can be disabled. The unit will operate in the same fashion, with the remainder of the controls.

Pressing the Heat button () and Lower Thermostat Control button () on the unit together for 2 seconds will disable or enable the heater.

NOTE: When the heater has been disabled and either the Thermostat buttons are pressed (,) the floating display will indicate "--".

Thermal Safety Cut-out

A thermal safety cut-out is incorporated in the heater to prevent damage due to overheating. This can happen if the heat outlet was restricted in any way. The heater will switch on once the obstruction has been removed and the heater has cooled. If the cut-out continues to operate intermittently, the heater should be switched off and a service agent contacted.

Maintenance

WARNING: ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE ATTEMPTING ANY MAINTENANCE.

LED lamps

This fire is fitted with LED (Light Emitting Diode) bulbs in place of traditional incandescent bulbs. These generate the same light levels as traditional bulbs, but use a fraction of the energy consumed.

Cleaning

WARNING – ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE HEATER.

For general cleaning use a soft clean duster – never use abrasive cleaners. The glass viewing screen and mirror fascia should be cleaned carefully with a soft cloth. DO NOT use proprietary glass cleaners.

To remove any accumulation of dust or fluff the soft brush attachment of a vacuum cleaner should occasionally be used to clean the outlet grille of the fan heater.


After Sales Service

Should you require after sales service or should you need to purchase any spares, please contact the retailer from whom the appliance was purchased or contact the service number relevant to your country on the warranty card.

Please do not return a faulty product to us in the first instance as this may result in loss or damage and delay in providing you with a satisfactory service. Please retain your receipt as proof of purchase.

Recycling

For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

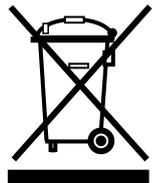

TEL: 0844 879 3588



FAX: 0844 879 3583



WEBSITE: www.dimplex.co.uk



Republic of Ireland 01 8424833