

## DTW16S Electronic Under-tile heating Control

### Quick Start Guide

For quick reference only please refer to appropriate instructions for further detail




### General

#### Setting the Time

Press the **DAY** button to select the day  
 Press the **HOUR** button to select the hour  
 Press the **MINUTE** button to select the minutes




#### MANual Mode


This mode maintains a constant floor temperature

Press **MODE** button to display   
 Select the desired temperature using  or 



#### AUTOMATIC Mode

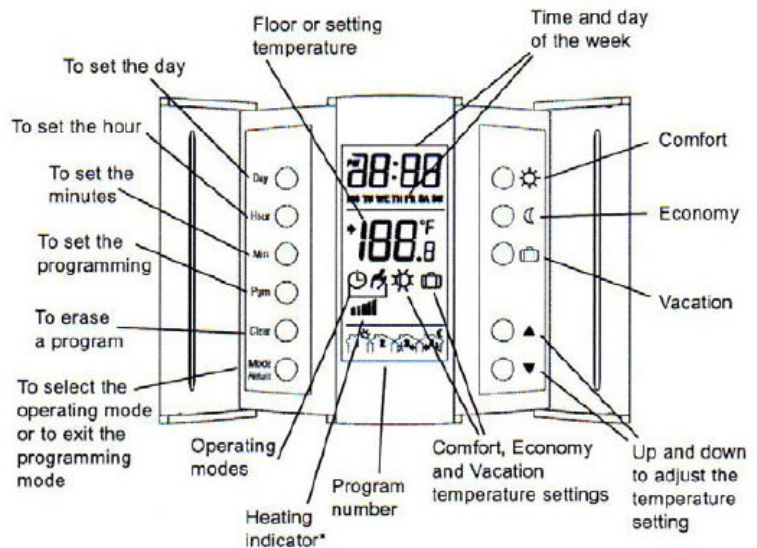

This mode runs your chosen time programs


Press **MODE** button to display   
 The  ,  shows the temperature setting used.  
 The program number is also displayed.



\* Percentage (%) of energy sent to the heating system to maintain the desired temperature.

 = 0 to 20%  
 = 20 to 40%




 = 40 to 60%  
 = 60 to 80%






 = 80 to 100%

### Programming



#### Temperature presets

Before programming you must set up temperature pre-sets as follows

Comfort  (Temperature when in use)  
 Economy  (Temperature when not in use)  
 Vacation  (Temperature when on holiday)

Select desired temperature using  or   
 Press and hold  ,  or  for 3 seconds (approximately)

To regulate the floor temperature by **only** the floor temperature sensor, adjust the temperature settings as follows:





Press  and select maximum setting.  
 Press  and select minimum setting.


#### Scheduled Programming

There are 4 programs for each day, reflecting when you wake up (P1), when you leave for work (P2), when you return (P3) and when you sleep (P4)

To program press **PGM**  
 Press **DAY** to select the day to be programmed  
 Press **PGM** to select the program number 1,2...  
 Program time with **HOUR** and **MIN** buttons  
 Press **MODE** to exit programming

Repeat above steps to set programs 2, 3, 4....

Press  button until  is displayed (app 3 seconds).  
 Press  button until  is displayed (app 3 seconds).

Press  (reset button) with pointed object and adjust floor temperature to desired floor temperature.  
 Press mode/return button.