

Contact Details

Please note that some of the contact details on this PDF document may not be current.

Please use the following details if you need to contact us:

Telephone: 0844 879 3588

Email: customer.services@gdcgroup.co.uk

The customer support section of our website also features a wide range of information which may be of use to you and is available 24 hours a day. It includes:

- Operating and installation instructions
- Easy 'How to use' guides for storage heaters
- Service and repairs
- Where to buy our products
- Literature downloads
- Heating requirement calculator

Visit - www.dimplex.co.uk/support

Quick Start Guide

FXL Fan Assisted Storage Heater

This guide is for quick reference only. Refer to the FXLN installation and operating instructions for further information

When the heater is first installed (first 48 hours)


During the day (or when off peak electricity is unavailable) - set the room temperature control to MAXIMUM and ensure the boost switch is OFF, allowing the fan to run as often as possible to dispel any odours from the heater.

During the night (or when off peak electricity is available) - ensure the boost switch is switched off and reduce the temperature control to MINIMUM to enable the core to accept a full input charge.

Operation (after 48 hours)


Input control - controls the temperature of the heater

Adjust control for the first few days until your ideal room temperature is found, then leave on this setting. The heater will automatically adjust for changing weather conditions.*

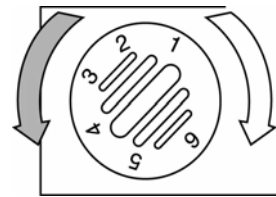

Room temperature control - controls the fan output

The fan will automatically switch on and off to maintain the desired temperature. The higher the setting the more frequently the fan will switch on, forcing more heat in to the room.

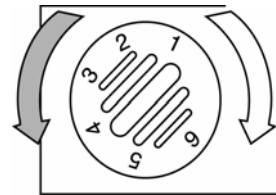

Boost (neon light on switch illuminates when boost is selected)

Fan boost On/Off switch allows additional top up heat with a direct acting element which uses day rate electricity. The boost function will only operate when the stored heat is exhausted.




Fan boost on/off switch

Leave on.

Storage on/off switch

Leave on for heating season.

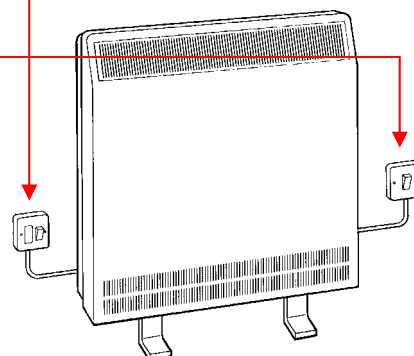

* **NOTE:** Changes to the input control setting will not come in to affect until the next period of off peak (cheap rate) electricity is available. If you are unsure when your off peak supply is available, contact your electricity provider.

WARNING: Walls, curtains and furniture should be at least 100mm away from the top and sides of the heater. Furniture and other obstructions should be at least 300mm from the front of the heater. **DO NOT COVER** or obstruct the air inlet or outlet grilles. **PLEASE REFER TO THE OPERATING AND INSTALLATION INSTRUCTIONS FOR FURTHER SAFETY ADVICE.**