

Contact Details

Please note that some of the contact details on this PDF document may not be current.

Please use the following details if you need to contact us:

Telephone: 0844 879 3588

Email: customer.services@gdcgroup.co.uk


The customer support section of our website also features a wide range of information which may be of use to you and is available 24 hours a day. It includes:

- Operating and installation instructions
- Easy 'How to use' guides for storage heaters
- Service and repairs
- Where to buy our products
- Literature downloads
- Heating requirement calculator


Visit - www.dimplex.co.uk/support

This guide is for quick reference only. Refer to RPX/RXPW4 installation and operating instructions for further information

RPX panel heater

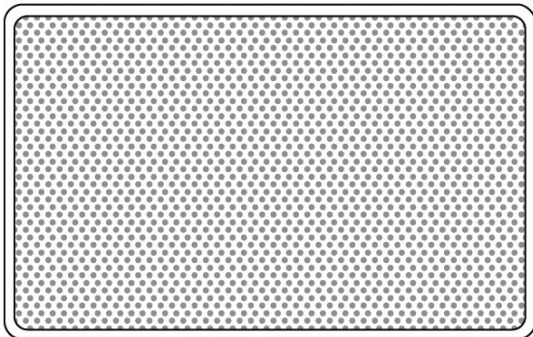


RXPW4 4-zone central controller

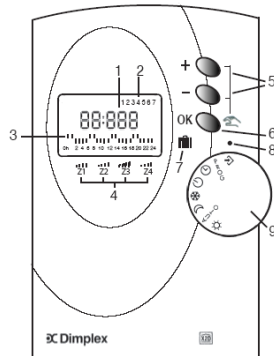

- 1 - Time
- 2 - Day of the week
- 3 - Current mode
- 4 - Zone status reference
- 5 - Controller setup/override buttons
- 6 - Validation button
- 7 - Holiday mode
- 8 - Selector switch index mark
- 9 - Mode selector switch

Heater controls

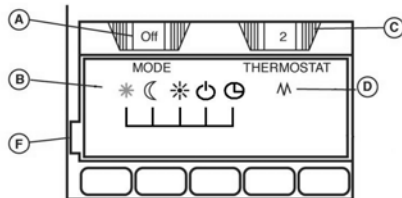

- (A) Function Selection
- (B) Function Display
- (C) Thermostat
- (D) Thermostat Indicator
- (E) Cover Opening Tab

- (A) **Mode selector:** Select the heater operating mode. Heater modes are as indicated in the table below.
- (B) **Mode display:** Illuminates to indicate the selected operating mode
- (C) **Thermostat:** turn the thermostat control to the appropriate position to give comfort level required.
Heater will automatically switch on and off as necessary to maintain the selected temperature. A higher setting will make the room warmer.
- (D) **Heat indicator:** Illuminates when the heater is delivering heat

Heater operation when connected to RXPW4 controller

The RXPW4 controller allows control of multiple Dimplex heaters from a single point. Heaters can be grouped together in "zones" and each zone configured with a different time program for each day of the week. Up to 4 zones are available.


When connected to an RXPW4 controller, the heater will operate in accordance with the controller program/setting. The heater mode control must be set to the ☉ position.

The heater will provide the following functionality in each of the controller modes:

Mode	Bars on Display	Heater Function
Comfort / On ☀	4	Thermostat setting
Background 🌙	1*	5°C below thermostat setting
Off ⏻	1*	Heater does not operate
Frost Protection ❄	n/a	Heater operates when temperature drops below 5°C

* Note the controller can be configured so that the AUTO program operates either as Background or Off modes. Please see RXPW4 installation /operating instructions for further details.

Typical system

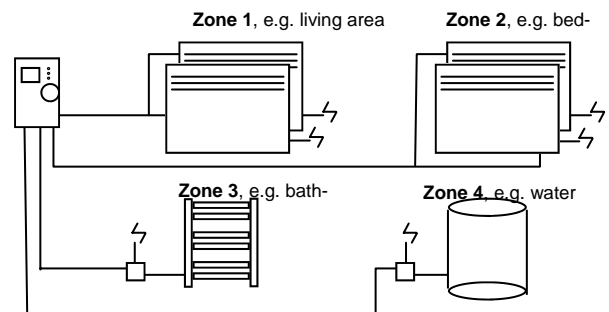

The RXPW4 controller allows control of multiple Dimplex heaters from a single point.

Heaters can be grouped together in "zones" and each zone configured with a different time program for each day of the week. Up to 4 zones are available.

Your system has installed with the following rooms in each zone:

- Zone 1: _____
- Zone 2: _____
- Zone 3: _____
- Zone 4: _____

Setting up the controller

Set the time

Before the controller can be used, the correct time and day must be set.

Do this by turning the dial to the ☉ position and using the "+" and "-" buttons to set the current time and day.

Set the daily programs for each zone

An individual time program can be set for each zone for each day of the week by turning the dial to the PROG position.

Please refer to the installation and operating instructions for details of how to set the program.

Everyday operation

AUTO mode

Turn the dial to AUTO mode for the heating to operate in accordance with the program for each zone.

Over ride

The program for each can be temporarily over ridden from the controller. Please refer to the installation and operating instructions for details of how this can be done.