

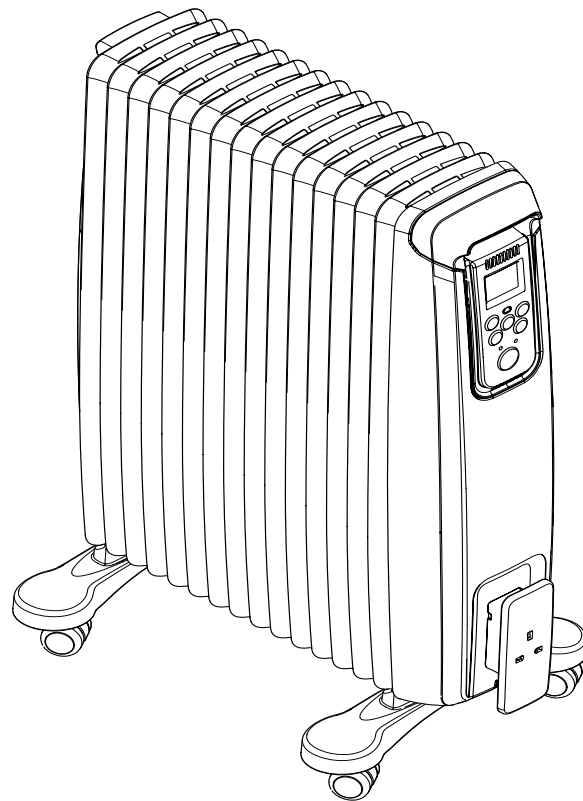
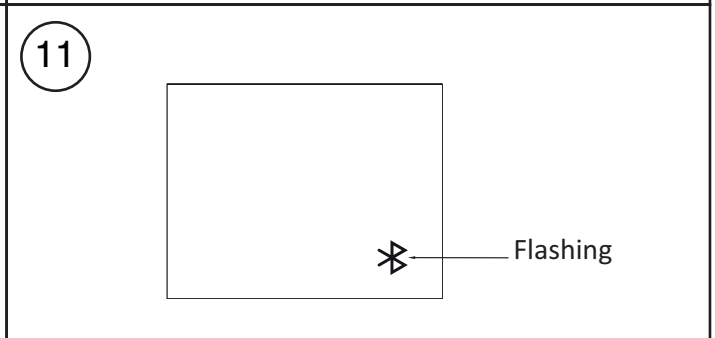
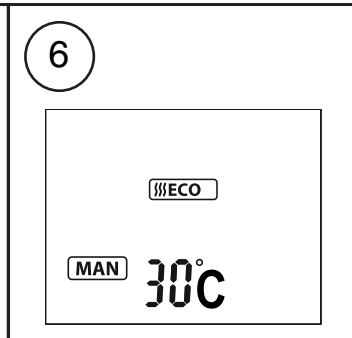
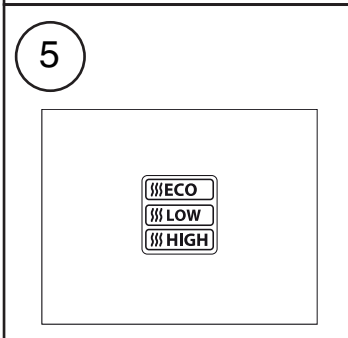
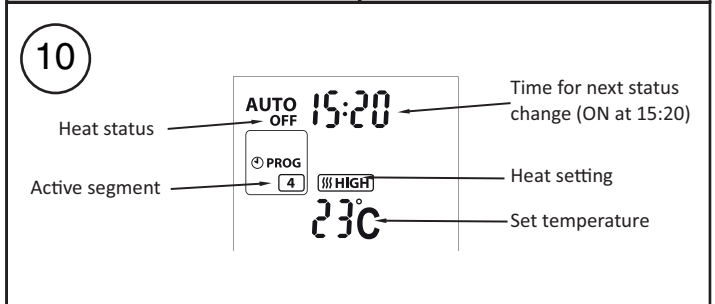
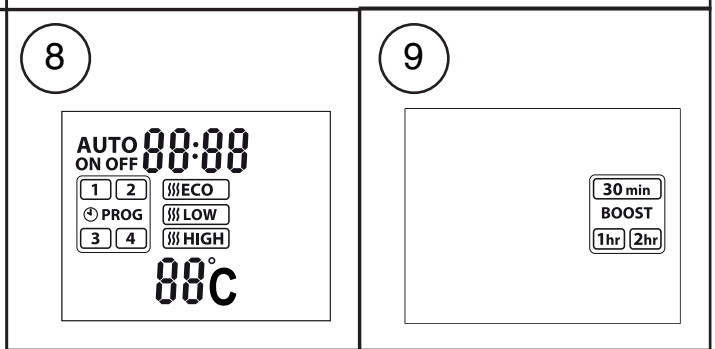
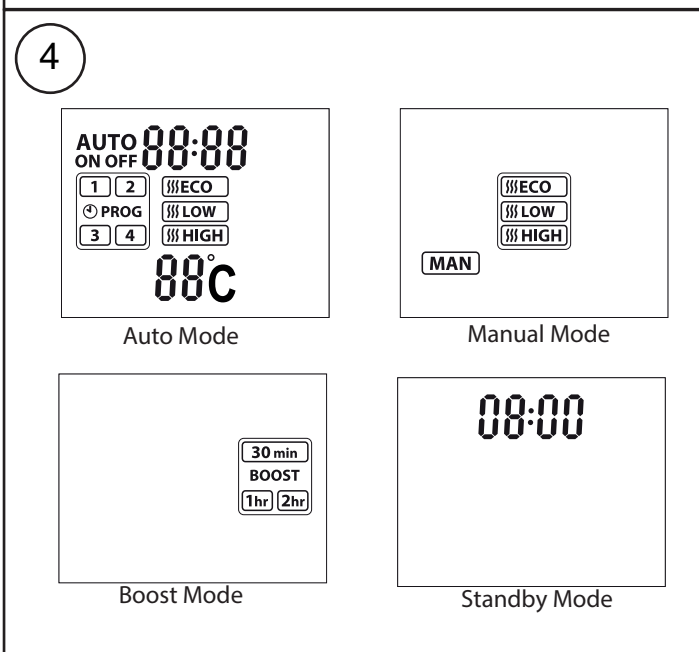
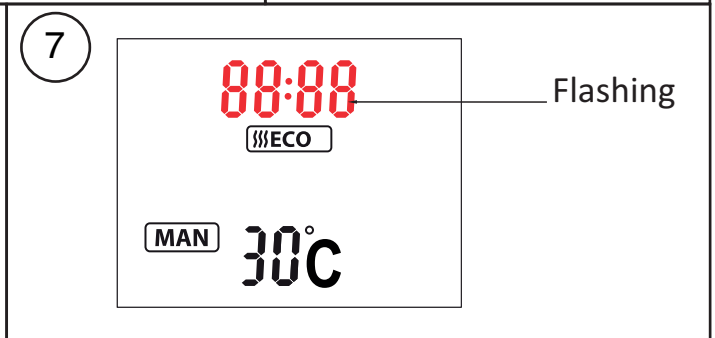
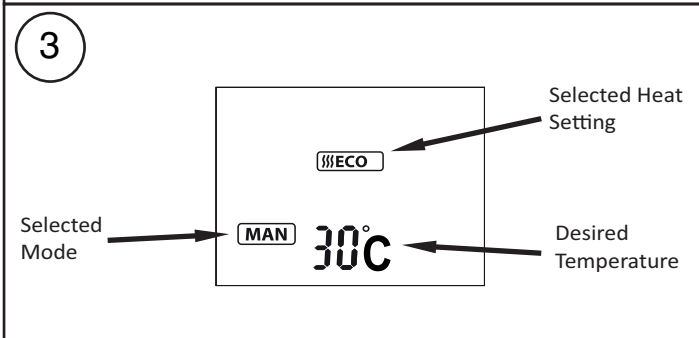


# Dimplex

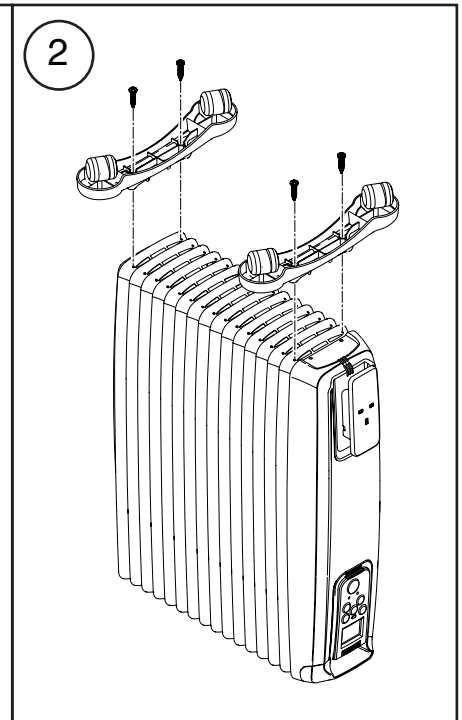

EvoRad2BTA

## EVO | RAD

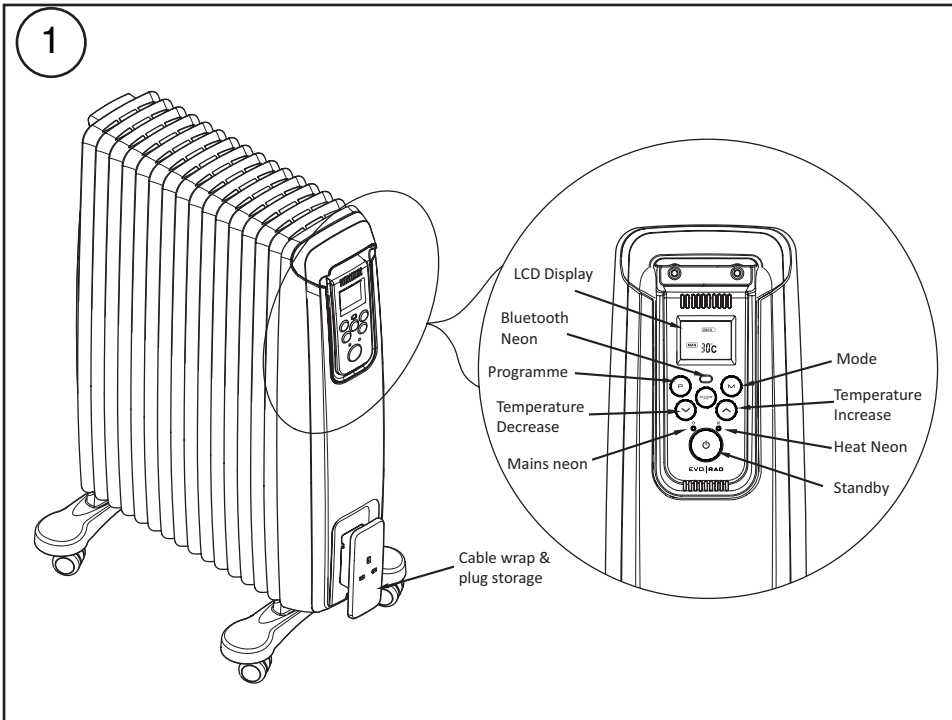

## Important Safety Advice

**IMPORTANT:** If the appliance is damaged, check immediately with the supplier before installation and operation.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



This heater carries the warning symbol indicating that it must not be covered.

**DO NOT** use the heater in the immediate surroundings of a bath, a shower or a swimming pool.

**WARNING:** This heater must not be used in a bathroom.

**DO NOT** place the heater directly below a fixed socket outlet.

**WARNING:** In order to avoid overheating, do not cover the heater.

We recommend that you open a window to ventilate the room when using the heater for the first time.

Unplug the heater when not required for long periods.

**IMPORTANT:** If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

**DO NOT** use the heater where gas, petrol, paint or other inflammable goods are used or stored.

The heater is designed for operation on an AC electricity supply, and is suitable for use in domestic dwellings and similar indoor locations.

Always ensure that the appliance is stood on a firm, level base near to, but not directly beneath, a suitable fixed socket outlet.

The heater is fitted with castors and a handle for ease of movement.

It is supplied with a cord and plug ready for use.

The supply cord should be uncoiled before use (see 'Storage').

DO NOT pull the heater along by the mains lead.

**Important** - The heater must only be operated with the wheels and castors fitted and in the upright position as shown in **Fig. 1**.

Warning – The heater complies with stringent safety standards but to ensure efficient operation **SURFACES OF THE HEATER WILL BECOME HOT AND CONTACT WITH THESE AREAS SHOULD BE AVOIDED**, particularly between the fins on the top and sides.

## Electrical

### WARNING – THIS APPLIANCE MUST BE EARTHED

If the socket outlets in your home are not of the 13 amp BS1363 type they will not accept the plug connected to this heater, therefore cut off the plug. When cut off this plug can constitute a shock hazard if inserted into a socket outlet. It must therefore be disposed of safely.

Before wiring the appropriate plug please note that the wires in this mains lead are coloured in accordance with the following code:

<b>GREEN/YELLOW:</b>	<b>EARTH</b>
<b>BLUE:</b>	<b>NEUTRAL</b>
<b>BROWN:</b>	<b>LIVE</b>

Connect the Green/Yellow wire to the terminal marked E or the earth symbol or coloured Green or Green/Yellow.

Connect the Brown wire to the terminal marked L or coloured Red.

Connect the Blue wire to the terminal marked N or coloured Black. **DO NOT** connect the Brown (Live) or the Blue (Neutral) wires to the Earth terminal of your 13 amp plug. If the terminals of the plug are unmarked or you are in any doubt, consult a qualified electrician.

## Fitting the Castors

**IMPORTANT:** The castors should only be fitted to the outer fins (as shown in **Fig. 2**). Fitting the castors to any other fin may result in the product becoming unstable and may topple over during operation.

**WARNING: THE HEATER IS HEAVY – TAKE CARE WHEN LIFTING AND ENSURE THAT IT IS SUPPORTED DURING ASSEMBLY TO PREVENT IT FROM TOPPLING.**

Remove the carton containing the castor assemblies from the packing.

Turn the heater upside down on a carpet or other soft surface to avoid damage. If required request the assistance of a second person. Position a castor bracket onto the outer fin and secure in place using the screws provided (see **Fig. 2**). Repeat the process for the other castor, ensuring it is located on the other end fin.

Lift the heater clear of the floor, then turn it back upright and stand it on its castors as shown in **Fig. 1**. It is now ready for use.

## Positioning the Heater

Select the position for the heater ensuring there is clearance from any furniture and fittings of at least 300mm above the heater and 150mm each side. The heater should only be operated on a flat stable surface.

## Operational modes

The electronic control has four control modes: **AUTO**, **MANUAL**, **BOOST** and **STANDBY** mode (see **Fig. 4**)

In both **MANUAL** and **AUTO** mode there are three heat settings options (see **Fig. 5**):

**'Intelligent' Eco Mode** - This is the initial default setting, the convector will automatically start up in this setting once power is applied. The convector will automatically regulate the room temperature accordingly. In this mode the convector operates at full power, however the output of the convector is automatically reduced and regulated as the room temperature approaches the desired level. This mode optimises energy use by calculating the most efficient and effective way to achieve the desired temperature setting. The desired room temperature can be adjusted at any time during operation by pressing the appropriate key.

**Low Heat** - In this option, the appliance will operate at a low heat setting, the appliance will automatically cycle at this setting to maintain the room temperature setting.

**High Heat** - In this option, the appliance will operate at a high heat setting, the appliance will automatically cycle at this setting to maintain the room temperature setting.

Press the Mode key, 'M', to toggle through the modes and the **ENTER** key to confirm the mode selection. Note: when selecting the mode if the **ENTER** key is not pressed, after 5 seconds the heater will activate the mode shown on the LCD display.

## Initial Operation

When the heater is initially connected to the mains the heater will power up in **MANUAL** mode with a set temperature of 30°C. The **Mains** and **Heat** indication neon will be lit and the LCD display will be as per **Fig.6**. For subsequent operations the unit will power up in its previous state, i.e. if it was in the boost mode when the unit was plugged out when power is reinstated it will resume in boost mode.

## Setting the Time

To set the time press and hold 'P' for two seconds, the time digits will begin flashing (see Fig. 7). Press the '▲' or '▼' buttons to set the time and press **ENTER** to confirm. The heater will revert to the previous operational mode.

## Standby Mode

With the heater **ON**, if the 'S' button is pressed, the heater will go into standby mode; the heater switches off, the LCD will display the current set time, only the mains neon remains illuminated. On pressing the 'S' button again the heater will come on in Manual mode and with a set point setting of 25 °C.

## Manual Operation

Repeatedly press the 'M' button until the manual mode is visible on the LCD and confirm the mode selection by pressing **ENTER**. Use the arrow keys to select the desired heat setting (see **Operational modes** for heat setting details) and confirm the selection by pressing the **ENTER** key. The desired temperature can be adjusted at any point during the Manual mode operation, see **Setting the Desired temperature**.

## Auto mode Operation

Repeatedly press the 'M' button until the Auto mode is visible on the LCD (see Fig.8) and confirm the mode selection by pressing **ENTER**. The heater will operate as per the pre-programmed time and temperature profile (see - Setting the Timer Profile). Note: if no timer profile has been set it will not be possible to select 'Auto' mode, it is necessary to set up a time program before Auto mode can be selected.

During Auto mode operation the LCD display will show the current heat status, the active programme segment, the time for the next status change, the heat setting and the set temperature (see Fig.10).

## Boost mode Operation

Repeatedly press the 'M' button until the Boost mode is visible on the LCD (see Fig.9) and confirm the mode selection by pressing **ENTER**. Once the boost mode is activated it will be necessary select the boost period, there are three periods available to choose from, 30 minutes, 1 hour and 2 hours. Use the arrow keys to select the desired boost period and confirm the selection using the **ENTER** key. The default heat setting is ECO mode and the set temperature is 25°C. The set temperature can be adjusted if desired, see **Setting the Desired temperature**. When the boost mode is active the LCD display will show the boost mode, timer period selected and the desired set temperature. The time display will toggle between the current time and time remaining for the selected boost period.

## Frost protection mode

The appliance has a frost protection mode. This setting is useful in areas such as garages to assist in the prevention of frost damage. In Manual mode, if the thermostat is set to its minimum setting '5°C', the heater will cycle ON and OFF to maintain a temperature of approximately 5°C and help protect against frosty conditions. The frost protection symbol ❄️ will be displayed on the LCD display when frost protection mode is activated.

## Indicator Neons

**Mains On Neon:** The mains neon, (see Fig. 1), remains illuminated when the power is supplied to the product. Note: This does not indicate whether the heating elements are on.

**Heat Neon:** Heat neon remains on when the heating element is active. Once the desired temperature is reached and the element turns off, the heat neon will indicate this by remaining off.

**Bluetooth Neon:** The Bluetooth neon will remain illuminated while successfully paired to another device.

## Setting the Desired Temperature

The desired temperature can be set using the '▲' or '▼' keys. The temperature can be set from 5°C to 30°C and this will be shown on the display. When the temperature is reached the heater will automatically switch OFF. If the ambient temperature drops the heater will come on again automatically.

## Setting the Timer Programmes

There are four program segments available, **P1**, **P2**, **P3** and **P4**. For each segment it is possible to set a desired 'On' time, 'Off' time, Heat mode and set temperature. It is not necessary to set all four segments if not required. The default setting is for all segments to be Off. To turn off a pre-programmed segment it is necessary to set both the 'On' time and the 'Off' time to 00:00. In order to set up a time/temperature profile the following steps must be completed:

1. To activate the programming screen press the 'P' key. The program settings screen for **P1** will be displayed and the time will be flashing. This flashing time is the 'On' time for **P1** and can be adjusted using arrow keys. Once the desired 'On' time has been set press the **ENTER** key to confirm the time.
2. Select a heat setting using the arrow keys and confirm the selection using the **ENTER** key.
3. Set the desired temperature using the arrow keys and confirm the setting using the **ENTER** key.
4. The 'Off' time must then be set by using the arrow keys, it is necessary to then press the **ENTER** key to confirm the 'Off' time setting.
5. The setup screen will then revert to the **P1** 'On' time set up screen, at this point it is possible move to the **P2** segment by pressing the 'P' key.
6. If required **P2**, **P3** and **P4** segment can be set up using steps 1-4 above.

7. If it is not required to set up **P2**, **P3** and **P4** segment at this stage, continue to press the 'P' key until the heater reverts to the previous operational mode. Alternatively if no keys are pressed the programming mode will time out and revert to the previous operational mode.

## Remote Bluetooth Operation

The appliance can be controlled remotely using a smartphone or similar device. To facilitate this remote operation it is necessary to first download the Dimplex **Remo** app. The app is available on both android and IOS devices and is available free from the Apple or Android App store. The App is compatible with Android version 4.3 and above and IOS version 5 and above.

Once the App has been downloaded it is necessary to pair the appliance with the smartphone to complete the remote setup. Please follow the steps shown below:

1. Launch the Dimplex **Remo** app on the smartphone or similar device.
2. To initiate pairing mode on the appliance press and hold the 'M' button for two seconds. The LCD screen will go blank with the exception of the Bluetooth logo flashing in the bottom right hand corner, See Fig.11. This indicates that the device is advertising to be paired with the **Remo** app.
3. On the smart phone the appliance should now be visible on the pairing screen, this will be a unique 6 digit code but will always start with EC, for example 'ECBC17'. Select this device and press connect to initiate pairing.
4. Once the pairing process is complete the app can be used to control the appliance.
5. Once paired successfully the Bluetooth logo will stop flashing and the Bluetooth neon will be illuminated.

## Safety in use

This appliance incorporates a number of safety devices. In addition to the **'Important Safety Advice'** section your attention is drawn to the following;

### Tilt Switch

The tilt switch will prevent the heater from working if it is accidentally tipped over on its side. If the radiator is tipped over while it is hot, disconnect the power and allow it to cool, then stand the radiator back upright. Reconnect the power - normal operation should be resumed.

### Safety Overheat Protection

For your safety this appliance is fitted with a thermal cut-out. In the event that the product overheats for some reason, the cut-out prevents excessive temperatures on the product by cutting the power to the heater. Once the heater has cooled down, it will reset automatically, it will continue to cycle on and off automatically until the reason for overheating is removed.

## Storage

If the heater is not required for long periods, for example during the summer, it should be stored in a dry place and preferably covered to prevent the accumulation of dirt and dust. The supply cord should be neatly coiled around the cable wrap and the plug stored in the cable wrap moulding.

## Cleaning

**WARNING - ALWAYS DISCONNECT THE POWER SUPPLY BEFORE CLEANING THE HEATER.**

Do not use detergents, abrasive cleaning powder or polish of any kind on the body of the heater.

Allow the heater to cool, then wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture in to the heater.

## Recycling



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

## After Sales Service

Your product is guaranteed for 3 years from the date of purchase The 3 year guarantee is extended for an additional 2 years when you register the product with Dimplex, within 28 days of purchase. If you do not register the product with Dimplex within 28 days, your product will remain guaranteed for 3 years only. Within the extended warranty period we undertake to repair or exchange this product free of charge providing:

- a) Proof of purchase such as a sales receipt can be provided, showing that the appliance was bought within the 36-months prior to registering the defect/fault.
- b) The appliance was correctly operated in accordance with the manufacturer's instructions and used solely for domestic purposes.
- c) The defect/fault was not as a result of accident, misuse, unauthorised modification or inexpert repair

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Validation of extended warranty

To validate your extended warranty register with us online at <http://register.dimplex.co.uk>

N.B. Each qualifying product needs to be registered with Dimplex individually. **Please note that the extended warranty is only available in the UK and Ireland**