Contact Details

Please note that some of the contact details on this PDF document may not be current.

Please use the following details if you need to contact us:

Telephone: 0844 879 3588
Email: customer.services@gdcgroup.co.uk

The customer support section of our website also features a wide range of information which may be of use to you and is available 24 hours a day. It includes:

- Operating and installation instructions
- Easy 'How to use' guides for storage heaters
- Service and repairs
- Where to buy our products
- Literature downloads
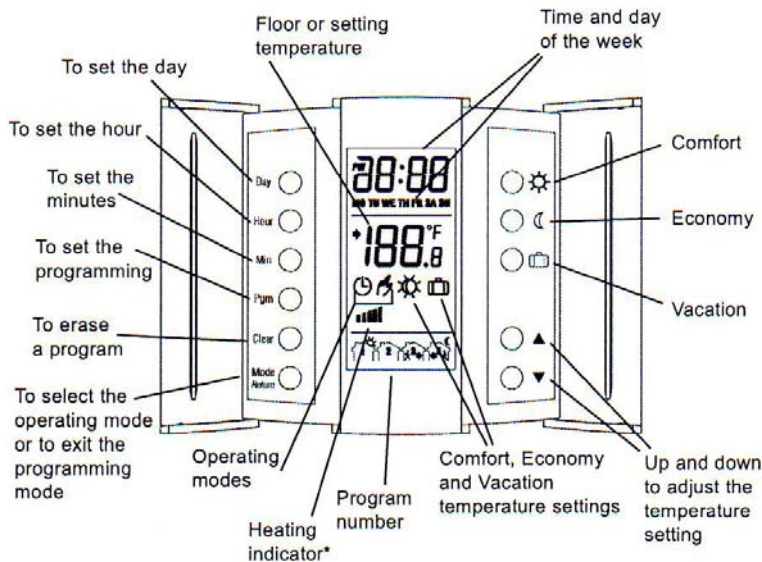- Heating requirement calculator

Visit - www.dimplex.co.uk/support

A division of GDC Group Ltd
Millbrook House   Grange Drive   Hedge End   Southampton   SO30 2DF
www.dimplex.co.uk

Registered No: 1313016 England
VAT GB 287 1315 50004
EEE Producer Registration Number –
WEE/GE0057TS
Paper from sustainable sources

Quick Start Guide

## DTW16S Electronic Under-Tile Heating Control

This guide is for quick reference only. Refer to DTW16S installation and operating instructions for further information

---

DTW16S Controller

* Percentage (%) of energy sent to the heating system to maintain the desired temperature.

▌ = 0 to 20%
▐▌ = 20 to 40%
▐▐▌ = 40 to 60%
▐▐▐▌ = 60 to 80%
▐▐▐▐▌ = 80 to 100%

Heater controls

Setting the Time:

Press the **DAY** button to select the day
Press the **HOUR** button to select the hour
Press the **MINUTE** button to select the minutes

Manual Mode 🖐

This mode maintains a constant floor temperature
Press **MODE** button to display 🖐
Select the desired temperature using ⋏ or ⋎

Automatic Mode 🕐

This mode runs your chosen time programs
Press **MODE** button to display 🕐
The ☼, ☾ shows the temperature setting used. The program number is also displayed.

Programming

Temperature presets
Before programming you must set up temperature pre-sets as follows

Comfort ☼ (Temperature when in use)
Economy ☾ (Temperature when not in use)
Vacation ▭ (Temperature when on holiday)

Select desired temperature using ⋏ or ⋎
Press and hold ☼, ☾ or ▭ for 3 seconds (approximately)

Scheduled Programming
There are 4 programs for each day, reflecting when you wake up (P1), when you leave for work (P2), when you return (P3) and when you sleep (P4)

To program press **PGM**
Press **DAY** to select the day to be programmed
Press **PGM** to select the program number 1,2...
Program time with **HOUR** an **MIN** buttons
Press **MODE** to exit programming

Repeat above steps to set programs 2, 3, 4....