


Dimplex

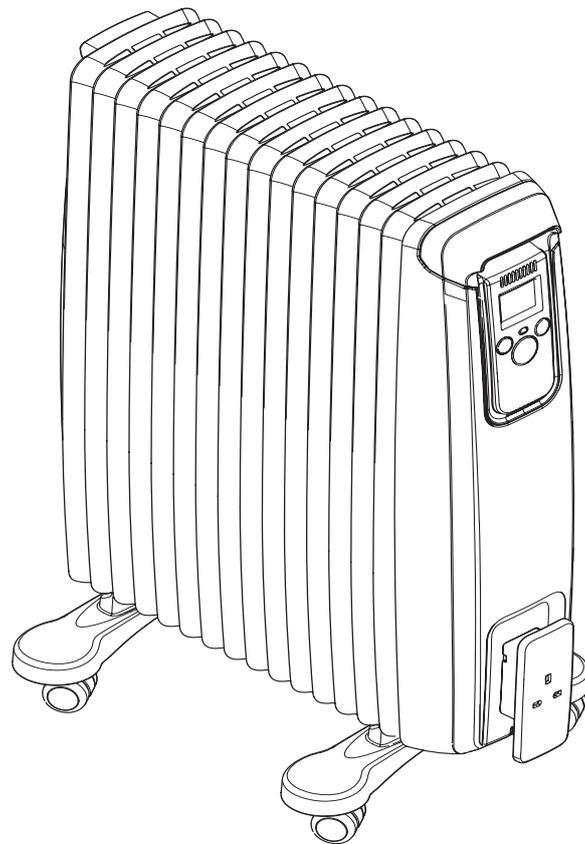

EvoRad2E


EVO | RAD

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE
As with all portable heating appliances - This product is only suitable for well insulated spaces or occasional use


08/53301/0 (UK) Issue 6

 The product complies with the European Safety Standards EN60335-2-30 and the European Standard Electromagnetic Compatibility (EMC) EN55014:1, EN55014:2, EN61000:3-2 and EN61000:3-3 which cover the essential requirements of EMC Directive 2014/30/EU and the LVD Directive 2014/35/EU.


1

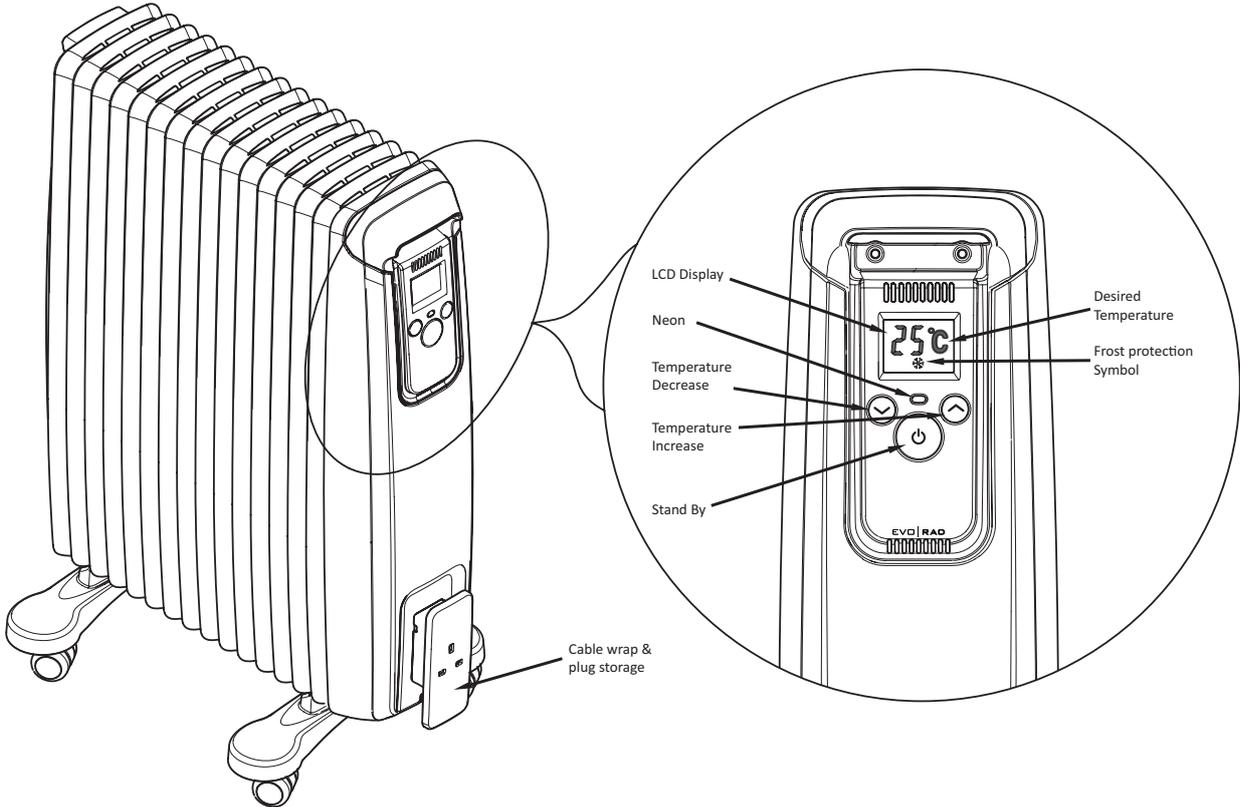


2

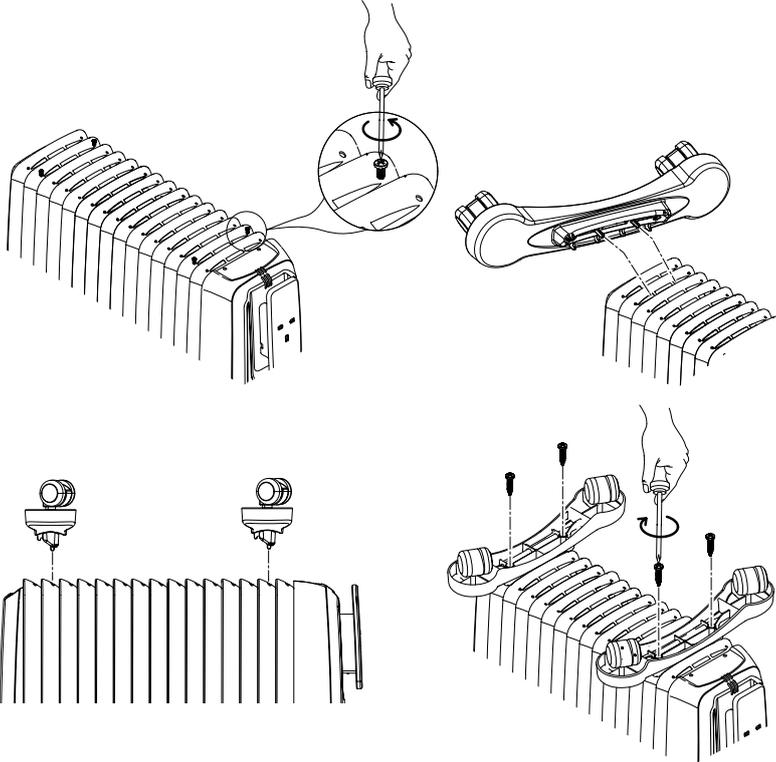

4

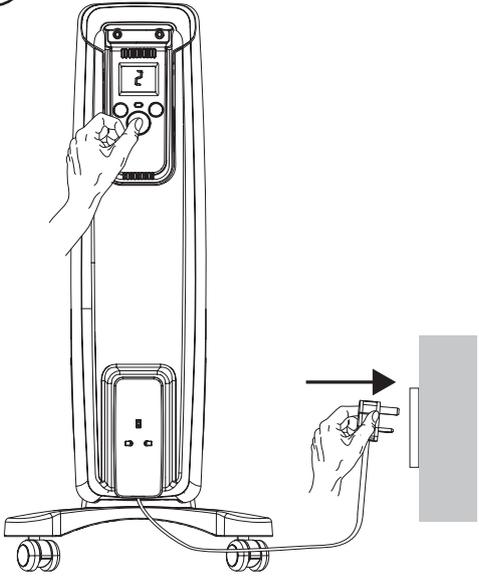

3

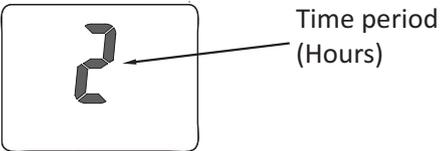

Model Identifier(s):		EvoRad2E	
Heat output			
Nominal heat output	P _{nom}	2.0	kW
Minimum heat output (indicative)	P _{min}	0.8	kW
Maximum continuous heat output	P _{max,c}	2.0	kW
Auxiliary electricity Consumption			
At nominal heat output	e _{lmax}	0.0	kW
At minimum heat output	e _{lmin}	0.0	kW
In standby mode	e _{lSB}	0.0005	kW
Type of heat output/ room temperature control			
With electronic thermostat room temperature control			Yes
Contact details		GDHVI, Barn Road, Dunleer, Co. Louth, Ireland, A92 WV02	

Important Safety Advice

IMPORTANT: If the appliance is damaged, check immediately with the supplier before installation and operation.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

WARNING: In order to avoid overheating, do not cover the heater.



This heater carries the warning symbol indicating that it must not be covered.

WARNING: DO NOT use the heater in the immediate surroundings of a bath, a shower or a swimming pool. This heater must not be used in a bathroom.

DO NOT place the heater directly below a fixed socket outlet.

We recommend that you open a window to ventilate the room when using the heater for the first time.

Unplug the heater when not required for long periods.

IMPORTANT: If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

DO NOT use the heater where gas, petrol, paint or other inflammable goods are used or stored.

Warning: The heater complies with stringent safety standards but to ensure efficient operation

SURFACES OF THE HEATER WILL BECOME HOT AND CONTACT WITH THESE AREAS SHOULD BE AVOIDED, particularly between the fins on the top and sides.

Always ensure that the appliance is stood on a firm, level base near to, but not directly beneath, a suitable fixed socket outlet.

The heater is fitted with castors and a handle for ease of movement.

It is supplied with a cord and plug ready for use.

The supply cord should be uncoiled before use (see 'Storage').

DO NOT pull the heater along by the mains lead.

Fitting the castors

WARNING: DO NOT OPERATE THE HEATER WITHOUT THE TWO FOOT & CASTOR ASSEMBLIES SECURELY FITTED.

WARNING: THE HEATER IS HEAVY, TAKE CARE WHEN LIFTING AND ENSURE THAT IT IS WELL SUPPORTED DURING ASSEMBLY AND USE TO PREVENT IT FROM TOPPLING OVER CAUSING INJURY OR DAMAGE.

Fitting the Foot & Castor Assemblies (Refer to Fig.2)

1. Remove the box containing the foot & castor assemblies from the product packaging.
2. Carefully turn the heater upside down supporting it on a soft surface (to avoid damage), request the assistance of a second person if required.
3. Remove the first set of foot fixing screws from the bottom of the fins identified by a label and set aside carefully. Line up the first foot as indicated in **fig.2** and press it down into position, drop the two foot fixing screws into the two screw bosses and tighten each one fully with your screw driver.
4. Repeat the above process (3) for the second set of fixing screws on the second fin indicated by a label. Once completed do a final check to ensure that both feet are secured properly.
5. Lift and turn the heater upright again (with assistance if required) and stand it on its castors as shown in fig.1, it is now ready for use.

Electrical

WARNING – THIS APPLIANCE MUST BE EARTHED

The heater is designed for operation on an AC electricity supply, and is suitable for use in domestic dwellings and similar indoor locations.

If the socket outlets in your home are not of the 13 amp BS1363 type they will not accept the plug connected to this heater, therefore cut off the plug. When cut off this plug can constitute a shock hazard if inserted into a socket outlet. It must therefore be disposed of safely.

Before wiring the appropriate plug please note that the wires in this mains lead are coloured in accordance with the following code:

GREEN/YELLOW:	EARTH
BLUE:	NEUTRAL
BROWN:	LIVE

Connect the Green/Yellow wire to the terminal marked E or the earth symbol or coloured Green or Green/Yellow.

Connect the Brown wire to the terminal marked L or coloured Red.

Connect the Blue wire to the terminal marked N or coloured Black. **DO NOT** connect the Brown (Live) or the Blue (Neutral) wires to the Earth terminal of your 13 amp plug. If the terminals of the plug are unmarked or you are in any doubt, consult a qualified electrician.

Positioning the Heater

Select the position for the heater ensuring there is clearance from any furniture and fittings of at least 300mm above the heater and 150mm each side. The heater should only be operated on a flat stable surface.

Operating the Heater - 'Control Mode'

With the product plugged in, press the "☺" button. This will illuminate the neon and also light up the LCD display. This indicates that the product is in control mode, the desired room temperature can then be set.

Setting the 'Desired' Room Temperature

The temperature is set using the temperature increase '↗' and temperature decrease '↘' keys - see **Fig. 2**. The room temperature can be set in the range between 5°C to 30°C. The back light of the LCD will change colour depending on the desired room temperature. (Blue screen 5 to 16, 17 to 19 green, 20 to 22 white, 23- 30 red). Please note the temperature setting is for desired room temperature (not the actual room temperature).

'Intelligent' Eco Mode

This is the appliance default setting, the appliance will automatically start up in this setting once power is applied and the standby key is pressed. The LCD display will indicate the desired room temperature and the appliance will automatically regulate the room temperature accordingly. In this mode the appliance operates at full power, however the output of the appliance is automatically reduced and regulated as the room temperature approaches the desired level. This mode optimises energy use by calculating the most efficient and effective way to achieve the desired temperature setting. The desired room temperature can be adjusted at any time during operation by pressing the appropriate key.

Standby Mode

With the heater ON if the '☺' button is pressed, the heater will go into standby mode, the heater switches off and the display will go blank. On pressing the '☺' button again the heater will come on in the with the desired room temperature settings it had prior to going into standby mode.

Note: the mains on 'Neon' will remain illuminated when the appliance is in standby mode.

LCD Display

The LCD display shows the desired room temperature. When the appliance is set to frost protection mode (5°C) the frost protection symbol '❄' will be displayed on the screen. The colour of the display backlight will vary depending on the desired temperature set (see notes above under 'Setting the desired room temperature'). The backlight will switch off a short period after the last key press. Any additional key presses will re-illuminate the screen.

Indicator Neon

The control contains an indicator neon. This neon comes on to indicate when the product is in 'control mode'. This neon does not indicate if the heat is on, if the room temperature is at the desired temperature then the heat will be off but the control is still operating, the neon will remain on.

When the delayed start function is activated the neon will blink intermittently to indicate the product is in delayed start mode. Once the delayed start period has elapsed the neon will switch on to indicate the product is in control mode.

Frost Protection Mode

The appliance has a frost protection mode. This setting is useful in areas such as garages to assist in the prevention of frost damage. If the thermostat is set to its minimum setting '5°C', the heater will cycle ON and OFF to maintain a temperature of approximately 5°C and help protect against frost conditions. The frost protection symbol '❄' will be displayed on the LCD display when frost protection mode is activated.

Runback Timer Mode

When the appliance is in Control mode and the '⏸' and '⏪' buttons are simultaneously pressed for more than 2 seconds the appliance shall enter a 'Runback' configuration menu.

The 'Runback' mode will allow the appliance to run, from now, for a pre-set time. After this time has expired the appliance shall enter Standby mode and the Runback timer shall clear to zero (no subsequent Runback). Keeping the buttons pressed the display will indicate the number of hours the Run Back time shall be enabled, from 1 through to 12. Fig. 6 below shows an example of a two hour Runback. After 12 the timer shall roll over to 1 and then increment through to 12 again. The time shall increment for every 2 seconds that the buttons are simultaneously pressed. When one or both buttons are released it shall be assumed that the Run Back time has been selected. Both buttons must be released before any other button operations are allowed. The Run Back function shall not be maintained if mains power is removed and reapplied.

The Runback function shall use the maximum power as defined using the '⏸' button sequence and the Set Point active prior to entering Run Back mode. The temperature Set Point may be changed by pressing the '⏩' or '⏪' buttons while in Run Back Mode. The display shall flash On and Off every 5 seconds showing the hours remaining in Runback mode, until the Runback time has expired, then the display shall be turned off (appliance enters Standby Mode). Please note only hours will be displayed not part of hours i.e. minutes

Delayed Start Mode

When the appliance is in Control mode and the '⏸' and '⏩' buttons are simultaneously pressed for more than 2 seconds the appliance shall enter a 'Delayed Start' configuration menu.

The 'Delayed Start' mode will allow the appliance to turn ON after a pre-set time. After this time has expired the appliance will turn ON and control about the set point. The appliance shall stay ON until the mains power is toggled or the '⏸' button is pressed to place the unit in Standby.

Keeping the buttons pressed the display will indicate the number of hours the Start Timer shall delay the appliance entering operation, from 1 through to 12. After 12 the timer shall roll over to 1 and then increment through to 12 again. The time shall increment for every 2 seconds that the buttons are simultaneously pressed. When one or both buttons are released it shall be assumed that the Delayed Start time has been selected. Both buttons must be released before any other button operations are allowed.

To indicate that the Delayed Start Timer function has been enabled the Neon shall blink intermittently once every 10 seconds.

The Delayed Start time shall be cleared to zero when the '⏸' button is pressed, the Delayed Start timer expires or if mains power is removed. The LCD display will display the Hours remaining in Delayed Start mode (No Backlight) and displays hours only increments (not minutes). Once the delayed start time has expired the appliance enters control mode, and the display will now show the Set Point.

The Delayed Start function shall not be maintained if mains power is removed and reapplied. The Delayed Start function shall use the maximum power as defined using the '⏸' button sequence and the Set Point active prior to entering Delayed Start mode.

Power Select Mode

It is possible to alter the power output of the appliance. Doing this limits the power output of the appliance, there are two alternative power modes available, mid heat (1200W) and low heat (800W). To change the power mode setting it is necessary to do the following:

1. The product must be first switched off and then switched on, this can be done by plugging in the appliance - see **Fig. 4** or by switching it on at an isolator switch. At the same time press and hold the '⏻' key for at least 2 seconds after main power is applied.
2. After power up '2' will appear on the LCD display and the standby key can be released. '2' indicates that the appliance is in mid heat mode.
3. In order to select low level heat setting press the '⏻' key within 5 seconds. The Display on the LCD should change to '1'.
4. Once the desired heat setting is reached do not press any other keys. After a short period the LCD will switch off and the appliance will revert to standby mode.
5. Pressing the '⏻' button again will turn on the display and the appliance will be in control mode. The display will toggle between the set temperature and the power mode setting, for example between 25°C and '2'
6. In order to revert to the default Eco mode, simply switch off the power at the wall or unplug the appliance. On the next operation (when plugged in) it will automatically revert to Eco mode.

Safety in use

This appliance incorporates a number of safety devices. In addition to the '**Important Safety Advice**' section your attention is drawn to the following;

Tilt Switch

The tilt switch will prevent the heater from working if it is accidentally tipped over on its side. If the radiator is tipped over while it is hot, disconnect the power and allow it to cool, then stand the radiator back upright. Reconnect the power - normal operation should be resumed.

Safety Overheat Protection

For your safety this appliance is fitted with a thermal cut-out. In the event that the product overheats for some reason, the cut-out prevents excessive temperatures on the product by cutting the power to the heater. Once the heater has cooled down, it will reset automatically, it will continue to cycle on and off automatically until the reason for overheating is removed.

Storage

If the heater is not required for long periods, for example during the summer, it should be stored in a dry place and preferably covered to prevent the accumulation of dirt and dust. The supply cord should be neatly coiled around the cable wrap and the plug stored in the cable wrap moulding.

Cleaning

WARNING - ALWAYS DISCONNECT THE POWER SUPPLY BEFORE CLEANING THE HEATER.

Do not use detergents, abrasive cleaning powder or polish of any kind on the body of the heater.

Allow the heater to cool, then wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture in to the heater.

Recycling



For electrical products sold within the European Community.

At the end of the electrical products useful life it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

After Sales Service and Guarantee terms and conditions

Your product is guaranteed for 3 years from the date of purchase. The 3 year guarantee is extended for an additional 2 years when you register the product with Dimplex, within 28 days of purchase. If you do not register the product with Dimplex within 28 days, your product will remain guaranteed for 3 years only. If you experience a problem with our Dimplex product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Dimplex Guarantee will cover repair or - at the discretion of Dimplex- replacement with a functionally equivalent Dimplex product.

Within the guarantee period we undertake to repair or exchange this product free of charge providing:

a) Proof of purchase such as a sales receipt should be provided, showing that the appliance was bought within the 36-months (+24 months if successfully registered) prior to registering the defect/fault.

b) The appliance was correctly installed and operated in accordance with the manufacturer's instructions and used solely for domestic purposes.

c) The defect/fault was not as a result of accident, misuse, unauthorised modification or inexpert repair

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

To validate your extended guarantee register with us online at: <http://register.dimplex.co.uk>

N.B. Each qualifying product needs to be registered with Dimplex individually.

Please note that the extended guarantee is only available in the UK and Ireland.

If after following these steps your product still does not operate you should return it to your point of purchase. Please do not return a faulty product to us as this may result in loss or damage and delay in providing you with a satisfactory service.

Please retain your receipt as proof of purchase.

What is not covered by a Dimplex Guarantee?

The Dimplex Guarantee does not cover any of the following: Any fault or damage to your Dimplex product due to faulty materials or workmanship occurring outside the Guarantee Period.

Normal wear and tear including parts that might wear out over time or consumables, such as [filters].

Any fault or damage occurring to any pre-owned Dimplex product or to any other equipment or property.

Accidental damage to your Dimplex product or damage to your Dimplex product from external sources (for example, transit, weather, electrical outages or power surges).

Fault or damage to your Dimplex product which is:

- not due to faulty materials or workmanship or which is due to circumstances outside Dimplex's control.
- caused by use of your Dimplex product for anything other than normal domestic household purposes in the country where it was purchased.
- caused by any misuse, abuse or negligent use of the Dimplex product, including but not limited to any failure to use it in accordance with the Operating Instructions supplied with the product.

- caused by any failure to assemble, install clean and maintain your Dimplex product in accordance with the Operating Instructions supplied with the product unless this was carried out by Dimplex or its authorised dealers.
- caused by repairs or alterations to your Dimplex product not carried out by Dimplex service personnel or its authorised dealer(s).

Terms and Conditions

The Dimplex Guarantee is valid for 3 calendar years, plus 2 if registered, from the date of purchase of your Dimplex product from a recognised retailer in the country of purchase and use, or the date of delivery of the product if later, always provided the original receipt has been retained and is produced as proof of purchase.

You must provide to Dimplex or its authorised agents on request the original receipt as proof of purchase and - if required by Dimplex - proof of delivery. If you are unable to provide this documentation, you will be required to pay for any repair work required.

Any repair work under the Dimplex Guarantee will be carried out by Dimplex or its authorised dealer(s) and any parts that are replaced will become the property of Dimplex. Any repairs performed under the Dimplex Guarantee will not extend the Guarantee Period.

Any replacement of your Dimplex product by Dimplex during the Guarantee Period will start the 5 year Guarantee Period afresh from the date of delivery of the replacement Dimplex product to you. (*Please keep original online guarantee registration email and sales receipt for your original purchase as proof of the additional 2 years, in case of the unlikely event you experience an issue).

The Dimplex Guarantee does not entitle you to recovery of any indirect or consequential loss or damage including but not limited to loss or damage to any other property.

The Dimplex Guarantee is in addition to your statutory rights as a consumer and your statutory rights are not affected by this Dimplex Guarantee.

Contact Dimplex

If you have any questions about what the Dimplex Guarantee covers and does not cover or how to claim under the Dimplex Guarantee, please contact us:

GDC Group LTD, Millbrook House, Grange Drive, Hedge End, Southampton SO30 2DF

Telephone: 0844 879 3588

Email: customer.services@gdcgroup.co.uk

Visit: www.gdcgroup.co.uk